

APPLICATION INSTRUCTIONS FOR AIRSEPT AIR SMOKE TREATMENT

SAFETY PRECAUTIONS:

Keep out of reach of children. Avoid skin and eye contact. Wear safety glasses and gloves. Avoid breathing vapor.


FIRST AID INSTRUCTIONS:

If skin contact occurs, wash with soap and water. Rinse with water. If eye contact occurs, flush with plenty of clean water. Seek medical assistance when in doubt.

AirSept Air Smoke Treatment has been engineered to break down the odor-causing proteins in tar and nicotine resin, resulting from tobacco smoke. Smoke Treatment will not stain cloth or vinyl materials. Special precautions must be taken for suede or leather interiors (particularly seats). Suede and leather surfaces should not be sprayed with the Smoke Treatment, there is a risk that the materials may stain. Cover these surfaces with covering paper and/or disposable Plastic Seat Cover. For seats with cloth and suede/leather combinations, the center section of the cloth fabric may be sprayed, then spread outward, toward the suede/leather, with a clean, dry cloth. To prevent accidental drops from the nozzle or the sprayed headliner from falling onto these surfaces, cover the seats. As with any common chemical, always test the intended surface(s) for colorfastness by applying Air Smoke Treatment to a small, hidden area first. **DO NOT SPRAY AIR SMOKE TREATMENT BEHIND THE DASH, AS THE PRODUCT MAY PROVE HARMFUL TO COMPONENTS.**

INSTRUCTIONS:

1. Remove all floor and trunk mats, and vacuum clean the mats and the interior of the vehicle and the trunk.
2. Verify that the vehicle has a dry interior and trunk. If any damp or wet areas are discovered, they will need to be completely dried prior to application of the AirSept Air Smoke Treatment. Find the source of the moisture and correct it.
3. Fill a four (4) ounce applicator bottle with AirSept Air Smoke Treatment and attach it to the Ulti-Flex Pressure Spray Tool. Attach the Ulti-Flex to a compressed air line. **IF APPLYING AIR SMOKE TREATMENT VIA 1-PINT BOTTLE WITH PUMP SPRAYER APPLICATOR, SKIP TO STEP 4.**

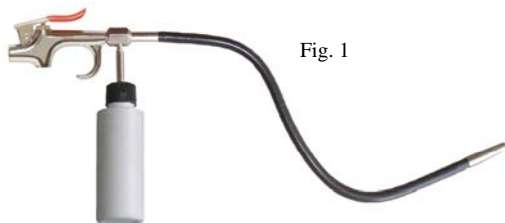

4. With the applicator nozzle positioned approximately 12"-18" away, spray the floor and trunk mats with Air Smoke Treatment, then wipe down with a clean, dry towel. Allow the mats to air-dry outside of the vehicle.
5. Empty and (where possible) remove the ashtray.
6. Turn vehicle on. Set the A/C controls to fan on high, mode on recirculate, and heat on high.
7. Starting at the front of the vehicle, apply AirSept Air Smoke Treatment to all vehicle interior surfaces, including carpets, seats, headliner, seatbelts, dash, ashtray support area, and windows. Spray the far side first and work back to the near side. Keep the applicator nozzle 12"-18" from the surfaces being treated.
8. After treating the vehicle, close the door and let sit for 5 minutes, making sure to leave the car on and A/C controls set as described in Step 7.
9. If ashtray has been removed from the vehicle, coat it generously with Air Smoke Treatment, so as to completely cover the bottom of the ashtray. A small nylon bristled brush may be used to clean corners or ridged areas of the ashtray. Allow the ashtray to soak in the Air Smoke Treatment, outside the vehicle.
10. Open all doors, shut off the engine and A/C controls, and wait 2 minutes for vehicle to air out.
11. Rinse the applicator toolkit with warm water immediately after use to prolong the life of these tools. Be sure to spray warm water through the nozzle to rinse out any residual product still in the capillary tube, otherwise it will corrode the tool.
12. Wipe down all treated surfaces with a clean, dry towel.
13. If there is a large amount of tobacco stain on the towel, repeat steps 4-8.
14. Wipe ashtray dry and replace upon completion of application.